

CRIMP SPECIFICATION

Terminal Carico No	Bell mouth		Cut-off Tab Max.		Conductor Brush		
Terminal Series No.	mm	In. mm		In.	mm	ln.	
33467							
33468	0.25-1.25	.010049	0.50 .020 0.10	0.10-0.55	.004022		
34736							


Terminal Series No.	Bend up Bend down	Twist	Roll	Seam			
33467	Oniman ed Commel		a a them i	Coom shall not be open and no wire allowed or			
33468	Crimped Samples must pass thru the 63867-3008 Checking Aid *			Seam shall not be open and no wire allowed ou of the crimping area			
34736			y Alu	of the chimping area			

* Ordered separately

After crimping, the conductor profile should measure the following.

Terminal	Wire Size			Conductor				Insulation				Pull Force	
Terminal Series No.			Crimp Height		Crimp Width		Crimp Height		Crimp Width		Minimum		
Series No.	AWG	mm ²	mm	In.	mm	ln.	mm	ln.	mm	In.	Ν	Lb.	
33467	18	0.83	1.10-1.20	.043047	1.75-1.85	.069073	2.00-2.20	.079087	1.85-2.05	.073081	90	20.3	
33468	Metric Only	0.75	1.05-1.15	.041045	1.75-1.85	.069073	2.00-2.20	.079087	1.85-2.05	.073081	90	20.3	
34736	20	0.58	1.05-1.15	.041045	1.75-1.85	.069073	1.85-2.05	.073081	1.85-2.05	.073081	75	17.0	

Pull Force should be measured with no influence from the insulation crimp. The above specifications are guidelines to an optimum crimp.

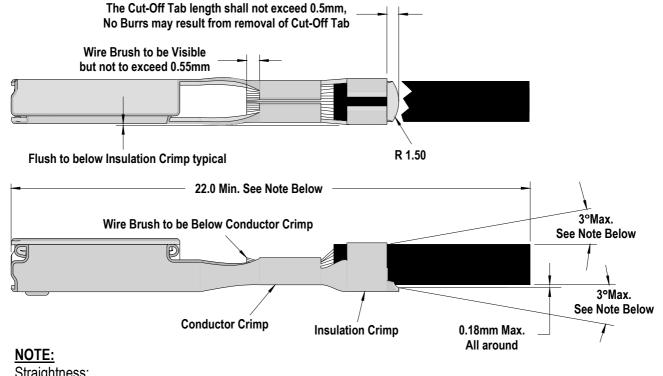

Straightness:

А Crimped terminal lead must be able to pass freely through the Checking Aid *, Part No.63867-3008. В

Wire on the crimped lead must meet all specification above.

Doc No: ATS-638673000 Revision: C


Release Date: 01-17-05 Revision Date: 01-24-12 **UNCONTROLLED COPY**

PARTS LIST

FineAdjust Applicator 63867-3000								
ltem	Order No	Engineering No.	ng No. Description					
Perishable Tooling								
	63867-3070	63867-3070	Tool Kit (All "Y" Items)	REF				
1	63867-3001	63867-3001	Conductor Punch	1 Y				
2	63867-3002	63867-3002	Conductor Anvil	1 Y				
3	63867-3003	63867-3003	Insulation Punch	1 Y				
4	63867-3004	63867-3004	Insulation Anvil	1 Y				
5	63867-3005	63867-3005	Cut-Off Plunger	1 Y				
6	63443-0036	63443-0036	Front Plunger Retainer	1 Y				
Other Components								
7	11-18-4083	60707-8	Feed Guide	1				
8	63443-0009	63443-0009	Scrap Chute	1				
9	63443-0021	63443-0021	Key	1				
10	63443-0090	63443-0090	Wire Stop	1				
11	63443-3160	63443-3160	Front Plunger Striker	1				
12	63443-6117	63443-6117	Rear Cover	1				
13	63700-0539	63700-0539	Cut-off Plunger Spring	1				
14	63867-3006	63867-3006	Anvil Mount	1				
15	63867-3007	63867-3007	Bottom Cap	1				
16	63867-3008	63867-3008	\star Checking Aid	REF				
			Frame					
17	63800-4901	63800-4901	Тор	1				
18	63801-3281	63801-3281	Base	1				
19	63801-4650	63801-4650	Track	1				
Hardware								
20	N/A	N/A	M3 by 6 Long SHCS	2**				
21	N/A	N/A	M4 by 6 Long SHCS	2**				
22	N/A	N/A	M4 by 8 Long SHSS	1**				
23	N/A	N/A	M4 by 12 Long BHCS	2**				
24	N/A	N/A	M4 by 12 Long SHCS	2**				
25	N/A	N/A	M4 by 16 Long SHCS	1**				
26	N/A	N/A	M4 by 50 Long SHCS	2**				
27	N/A	N/A	M5 by 12 Long SHCS	1**				
28	N/A	N/A	3MM by 6 Long Roll Pin	1**				
29	N/A	N/A	#10-32 by 3/8"Long Flat Point SSS	1**				
30	N/A	N/A	#10-32 Hex Jam Nut	1**				
** Available from an industrial supply company such as MSC (1-800-645-7270).								

T The Checking Aid 63867-3008 to be ordered separately if required. (This item is not included with the Applicator and is shown for Reference purpose only)

Doc No: ATS-638673000 Revision: C Release Date: 01-17-05 Revision Date: 01-24-12 UNCONTROLLED COPY

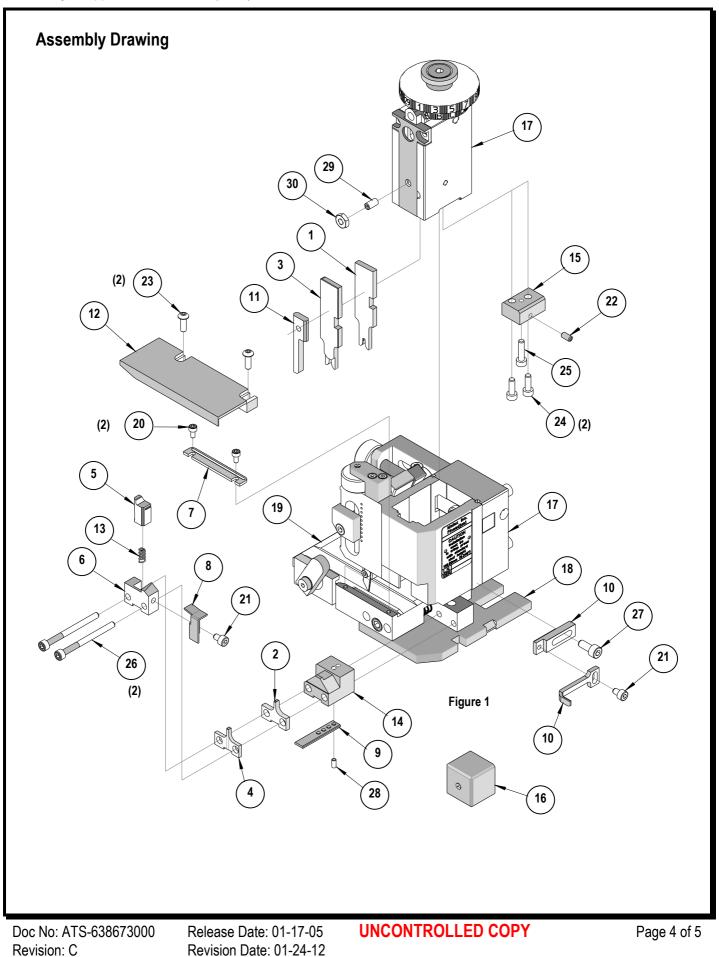

NOTES

- 1. Molex recommends an extra perishable tooling kit be maintained at your facility.
- 2. Verify tooling alignment by manually cycling the press and Applicator before crimping under power. Check that all screws are tight.
- 3. Slugs, Terminals, Dirt and Oil should be kept clear of work area.
- 4. Wear safety glasses at all times.
- 5. For recommended maintenance refer to the FineAdjust Manual.

CAUTION: This applicator should only be used in a press with a shut height of 135.80 mm (5.346"). Tooling damage could result at a lower setting.

CAUTION: To prevent injury never operate this Applicator without the guards supplied with the press or wireprocessing machine in place. Reference the press or wire processing manufacturer's instruction manual.

CAUTION: Molex crimp specifications are valid only when used with Molex terminals, applicators and tooling.

Visit our Web site at http://www.molex.com